


**Electronic Schematic
part # 1865
Wireless Control Kit for 1600UT**

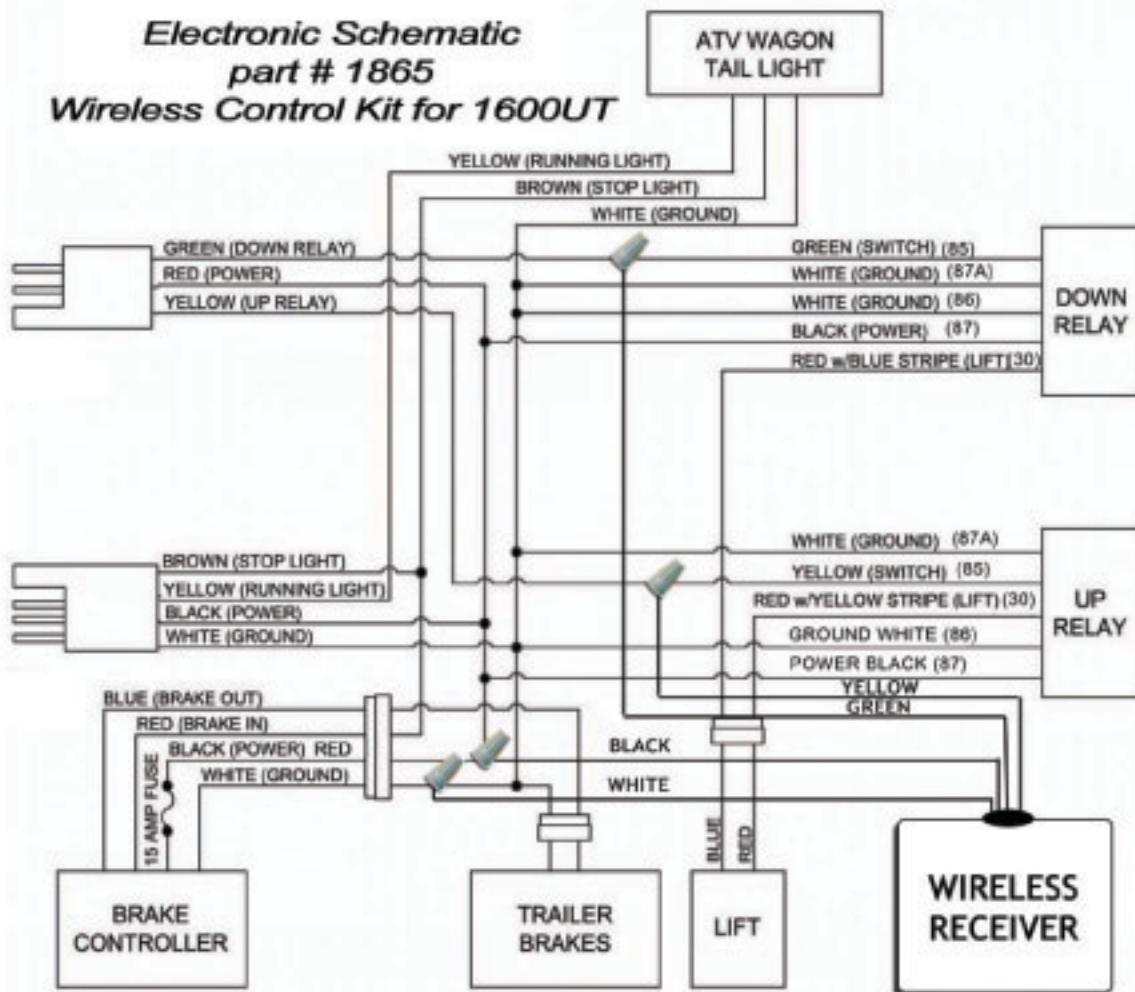

ATTENTION:
Two sets of installation
instructions follow.

**For 2008 or older
trailers, see page 2.**

**For 2009 or newer
trailers, see page 4.**

Instructions and photos are on the following pages for easy step by step installation of your new Wireless Control Kit for Bosski trailer 1600UT ATV Wagon. Basic electronic tools are needed for all 2008 or older trailers.

MODEL YEAR 2008 & OLDER WIRELESS INSTALLATION

1. Open the Black Box located on the trailer just above the Power RAM electric lift.



2. Carefully unbolt the pair of relays on the left, inside the Black Box.




3. Gently remove the relay section, carefully feeding additional wire from the back of the Black Box so you have more area to work.

CAUTION: BE CAREFUL
NOT TO UNPLUG ANY
OF THESE WIRES.



SEE PAGE 4 FOR MODEL YEAR 2009 TRAILER INSTRUCTIONS


4. Cut the Yellow and Green wires about 3 inches from where each wire connects to the pair of relays.
5. Cut the White wire about 3 inches from where it connects to the brake controller four-pole connection.
6. Find the small Red wire which connects with the Black wire at the brake controller four-pole connection. Cut the small Red wire about 3 inches from the four-pole connection.

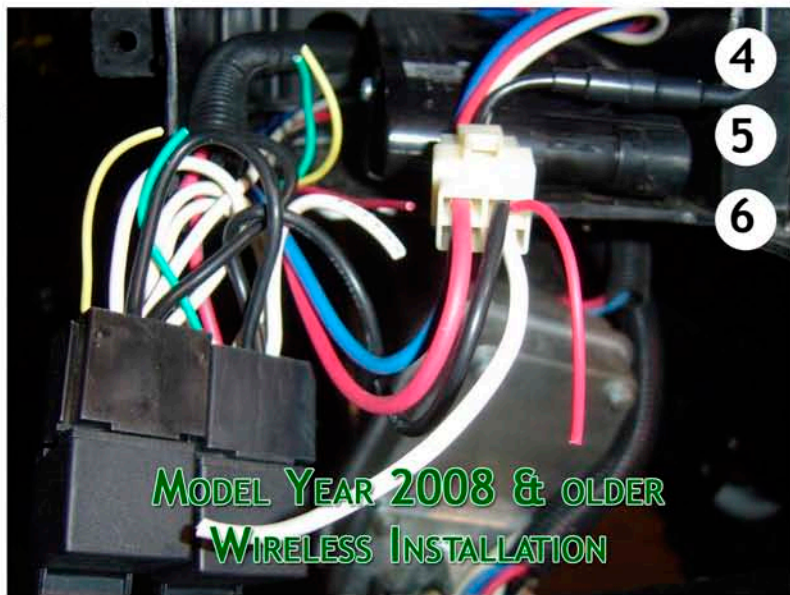


7. Connect the Black wire from the Wireless Receiver to the Red wires from Step 6 and make a three-wire connection. Continue to connect the color matching wires from the Receiver to the cut wires from Step 4 & 5, making three-wire connections of White, Yellow, and Green.

TEST YOUR WIRELESS DUMP BY CONNECTING POWER AND GROUND TO THE 4-POLE CONNECTOR FOUND ON THE TRAILER COUPLER/TONGUE SECTION

8. We recommend soldering the new connections to ensure a long, trouble free installation. Use the supplied end connectors for wire protection.

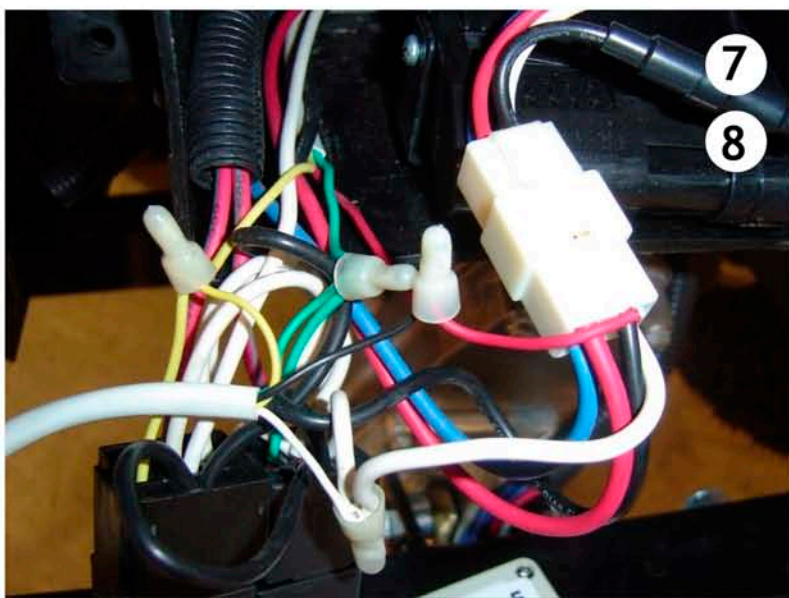

9. Gently feed the wire from the back of the Black Box and remount the relays inside the Black Box.
10. Carefully place the new Wireless Receiver on top of the brake controller in the Black Box.

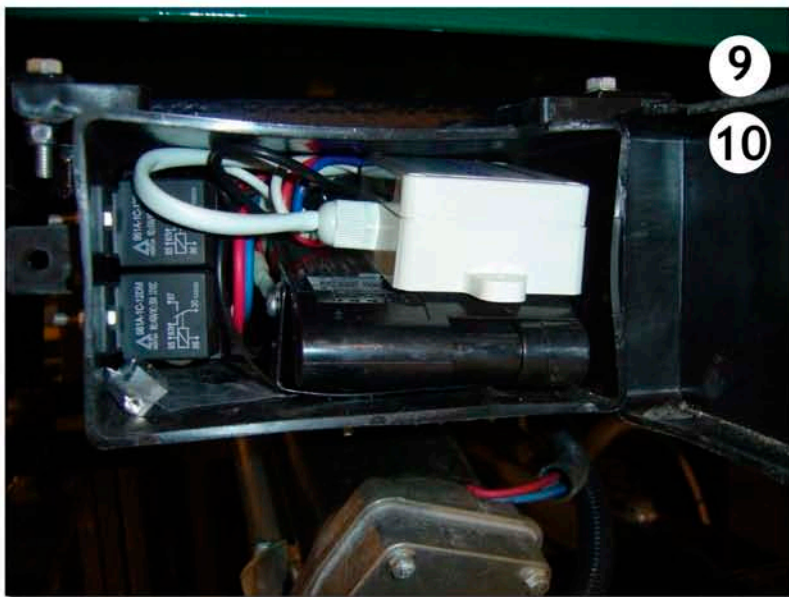

**MODEL YEAR 2008 & OLDER
WIRELESS INSTALLATION**

1



2009 WIRELESS INSTALLATION

1. For model year 2009 trailers, open the Black Box located on the trailer just above the Power RAM electric lift.

2




2. Locate the preinstalled 4 pole connector inside the Black Box, which has yellow, green, black, and white wires connected to it.

3



3. Connect the Wireless Receiver plug to the 4 pole connector in the Black Box. Be sure to align and match the colored wires correctly. Push the connectors together until it clicks.

4

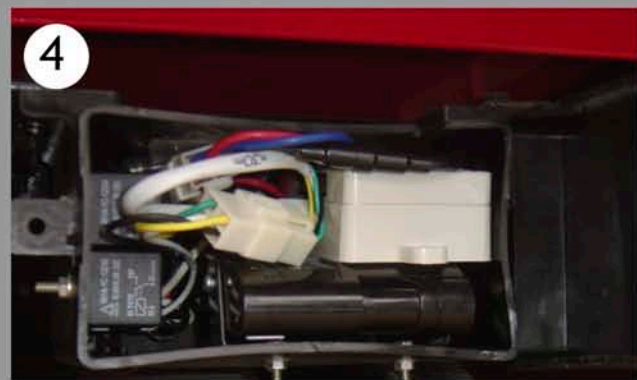

4. Carefully place the new Wireless Receiver on top of the brake controller in the Black Box.

2009 WIRELESS INSTALLATION